



CABLE ASSEMBLY INSTRUCTIONS

RSA-3500-141-03


INSULATOR

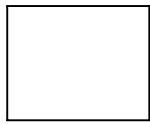


MAIN BODY

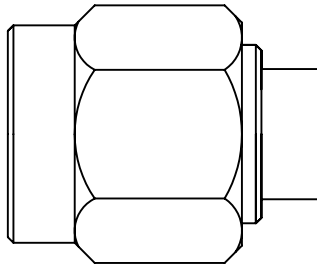


PIN




STEP 1

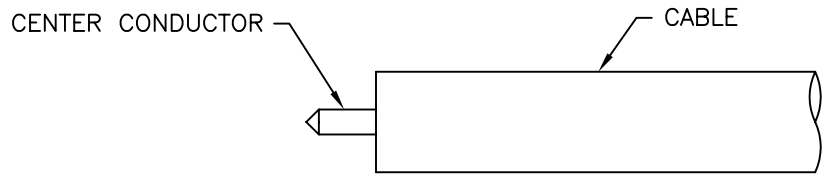

STEP 2

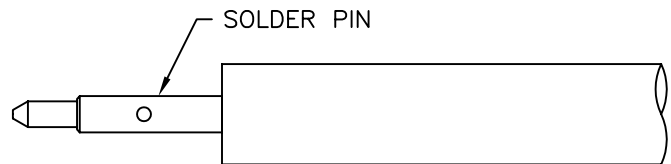

STEP 3

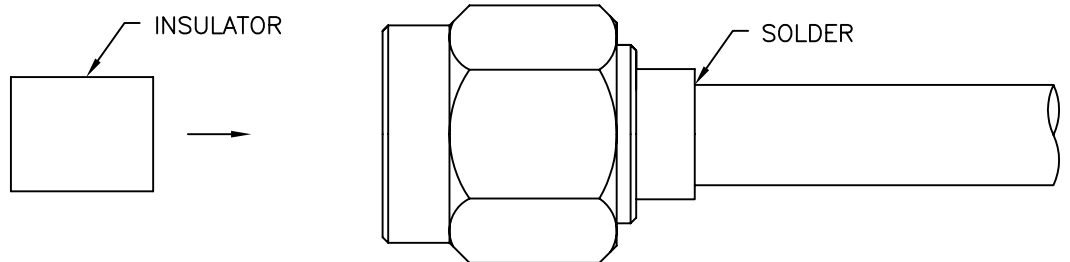

Step 1: Cut end of cable evenly. Strip cable to dimensions shown on outline drawing. All cuts are to be sharp and square. Remove burrs. Do not nick center conductor.

Step 2: Slide pin over center conductor until it butts against the insulator. Solder pin to cable center conductor using minimum amount of heat.

Step 3: Insert the pin into the main body. Solder main body to cable applying minimum amount of heat. Insert insulator into body until flush with the reference plane.

RSA-3500-141-03 AP.dwg

RF CONNECTORS

11/29/06

7610 Miramar Road, San Diego, CA 92126-4202 - (858) 549-6340
(800) 233-1728 - Fax (858) 549-6345 E-mail: rfi@rfindustries.com - www.rfindustries.com

CZ